

# **VIDEOCADE 5002**

## **BLACK JACK/ACEY DEUCEY/POKER**

### **OPERATING INSTRUCTIONS**

Insert Videocade 5002 into your unit and press the Reset button to get the game selection displayed on your television screen.

#### **BLACK JACK (1 to 4 players)**

The object of Black Jack is to beat the dealer's hand by getting cards totaling as close to 21 as possible without going over 21. The values of the cards are as follows:

Ace . . . . . 1 or 11 points  
10 through King . . . . . 10 points  
2 through 9 . . . . . face value

Videocade 5002 plays with one deck of cards and Las Vegas rules with just a few exceptions.

1. You may not split pairs with more than two players.
2. There is no insurance.
3. Five card under 21 is automatic winner.

Press (1) on the keypad to play Black Jack. The Professional Arcade will ask you to:

**"ENTER # OF PLAYERS"**

Each player begins with a bankroll of \$1,000. The screen is divided into four quadrants, with the dealers cards being displayed in the yellow, horizontal bar which separates players 1 and 3 from 2 and 4.

At the bottom of the screen, the Professional Arcade will display which player is to bet.

#### **HAND CONTROL**

To place a bet you must:

Turn the knob and press the trigger to bet in tens of dollars.

Push forward on the joy stick, turn the knob, and press the trigger to bet in hundreds of dollars.

Pull backwards to bet in thousands of dollars.

After all cards are dealt, the Professional Arcade will ask:

**"PLAYER #1 SELECT"**

Push joy stick forward, pull trigger to HIT.

Push joy stick right, pull trigger to STAND.

Pull joy stick back, pull trigger to DOUBLE.

Push joy stick left, pull trigger to SPLIT.

(Splitting pairs can only be done with one or two players.)

Player #1 must press the trigger to deal next hand. Black Jack ends when all players are busted.

#### **ACEY DEUCEY (1 to 4 players)**

Acey Deucey is a game which is known by many different names, one of the most popular being "In-Between". In Acey Deucey you ante \$10 and are dealt two cards. You must bet against the pot that the next card dealt will fall in between the two cards you possess. Ties lose.

Press (2) on the keypad to play Acey Deucey. The Professional Arcade will ask you to:

**"ENTER # OF PLAYERS"**

Acey Deucey is played with one deck of cards. Ace is always declared low. When dealt a pair of two cards which are in numeric sequence you may pass by not betting but you will automatically lose your \$10 ante.

Player #1 must press trigger to deal next hand.

## HAND CONTROLS

(Follow hand control operation procedure of Black Jack)

As in Black Jack, Acey Deucey ends when all players are busted.

POKER (2, 3, or 4 player)

This game is played like five-card-draw with the exception that the first five cards are dealt face up. The maximum cards that can be drawn are three.

Press (3) on the keypad to play Poker. The Professional Arcade will ask you to:

"ENTER # OF PLAYERS"

Each player starts with a bankroll of \$1,000. Maximum bet is \$100. A player may fold by not betting or not "seeing" another player's raise. There is a maximum of three raises.

As in the other two games of this Videocade, betting is done by using the hand control.

Knob ..... turn to select dollar amount.

Trigger ..... press to enter your selection.

Joy Stick ..... no function.

After all opening betting has been completed, players will be allowed to draw cards.


Cards will appear face down in the golf horizontal bar, one at a time beneath player #1 and above player #2. The face down cards will appear from left to right. Players should pull the trigger of the hand control for every card they wish to exchange. In a two player game, for example, both players can press their triggers simultaneously. They do not have to take turns.

Player #1 must press trigger to deal next hand.


The game ends when all but one player is busted.

Manufactured by: **Bally Consumer Products Division**  
Bally Manufacturing Corporation  
10750 West Grand Avenue  
Franklin Park, IL 60131

# Bally<sup>®</sup> PROFESSIONAL Videocade<sup>™</sup> 5002

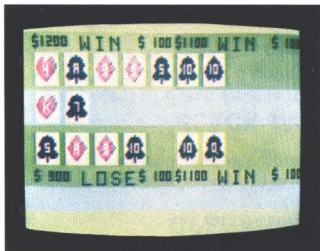

BLACK JACK

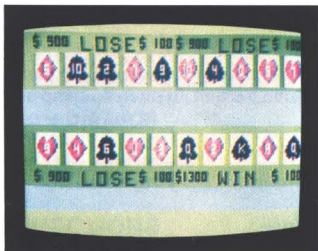

ACEY DEUCEY

POKER